


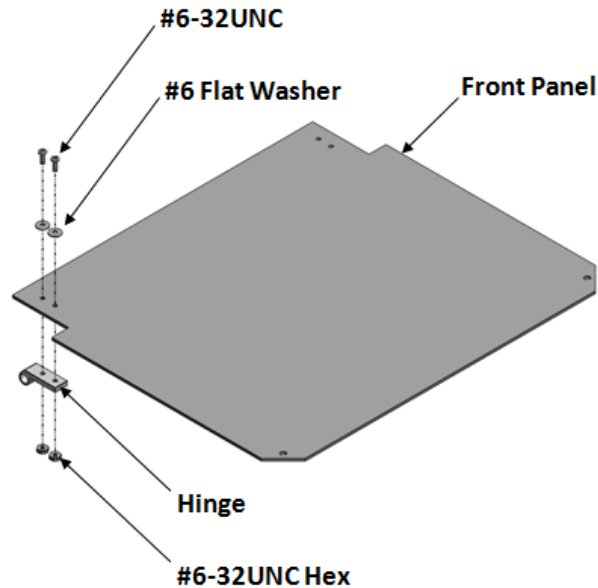

Instructions for Mounting Hinge to Front Panel


1. Place (1) #6-32UNC hex nut into (1) hinge (hold in place).
2. Install (1) #6-32UNC x 3/8" pan head screw with (1) #6 flat washer through the front panel and the hinge into the hex nut.
3. Repeat steps 1 and 2 for other screw.
4. Repeat steps 1-3 for other hinge.
5. Leave all the screws slightly loose.



Hinged Front Panel Kit	Front Panel P/N
HFPP66	70-60820HFPPC1
HFPP86	70-60821HFPPC1
HFPP88	70-60884HFPPC1
HFPP108	70-60829HFPPC1
HFPP120	70-60830HFPPC1
HFPP122	70-HFPP1212PC-1
HFPP142	70-60831HFPPC1
HFPP164	70-HFPP1642
HFPP186	70-HFPP1862
HFPP206	70-HFPP2016-1

Instructions for Mounting Hinged Front Panel to Enclosure

1. Install (1) corner slider in each corner slot opposite hinge side.
2. Install (1) #4-40 x 5/16" self-tap screw into each of the holes of the corner sliders evenly until the screw head touches the slider's flange to lock them in place at the desired panel depth (1.5" max. from the top of box).
3. Install (1) corner slider on each side of the hinged front panel assembly as shown.
4. Install the hinged front panel assembly with the corner sliders into the hinged side of box
5. Install (1) #4-40 x 5/16" self-tap screw into each of the holes of the corner sliders evenly until the screw head touches the slider's flange to lock them in place at the desired panel depth (1.5" max. from the top of box).
6. Align the panel with the corner sliders opposite the hinge and install (1) #10-32 x 5/16" screw if desired, to lock panel in place.
7. Tighten all #6-32 screws through the hinges.

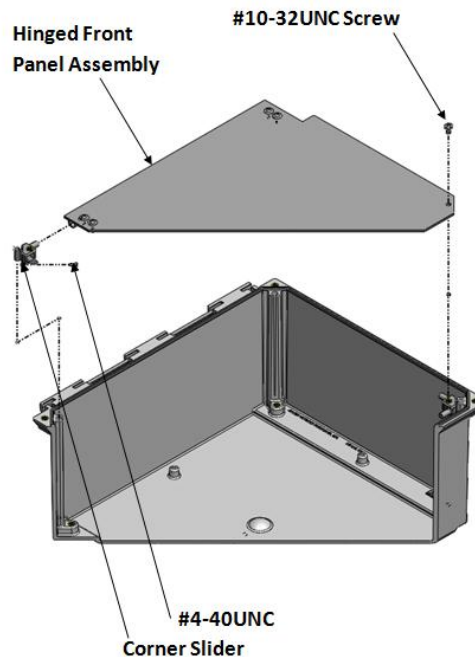

NOTE: For the 1648, 1860 & 2060 series, the #4-40 self-tap screws are not used. On these series, there is a pre-installed #8-16 screw that is tightened to lock the sliders in position.
The panel can be adjusted more than 4" from the top of the box for the 1648, 1860 & 2060 series.