 





List of Items Included:


- (2) Hinge Side Bracket Sub-Assembly, Drawing #6259040

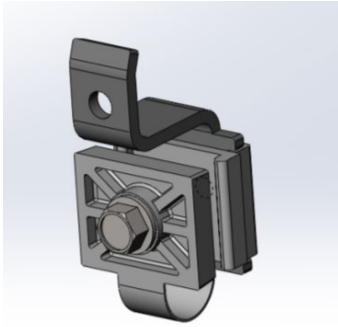

 - (2) Latch Side Bracket Sub-Assembly, Drawing #6259042

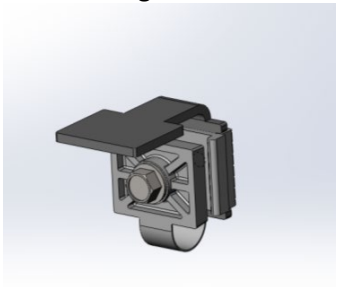

 - (1) Swing Out Panel Sub-Assembly, Drawing #6259175

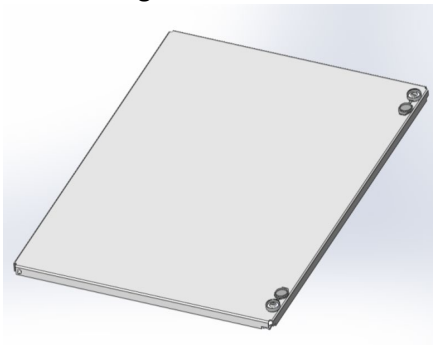


List of Items Required:

- 3/8 inch Hex socket driver
- 9/16 inch Hex socket driver

Assembly of the Swing Out Panel:

 Step 1. Install the (2) Hinge Side Bracket kits onto the rails on the inside of the enclosure where the desired hinge side of the Swing Out Panel will be located. The locking screw should be loosened to allow the Adjustable Bracket kit to slide easily in the box rails. Position the Hinge Side Bracket kits at the desired depth inside the enclosure, taking care to set each at the same depth from top of the enclosure. Tighten locking screws to minimum 20 in-lb (2.3 N-m) torque in the desired location.

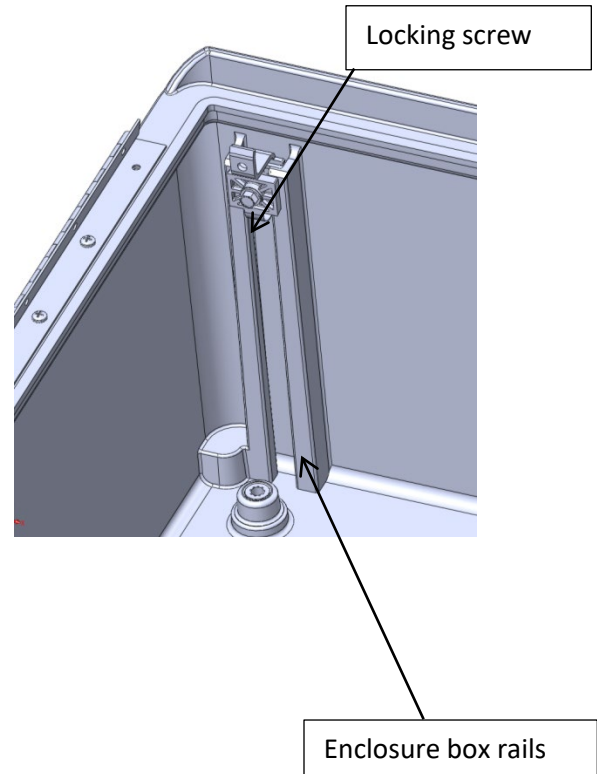






Swing Out Panel Kit

Installation Instructions for Swing Out Panel Kit
AMXL403212L3PT and AMXL403212L3PTW

 
Step 2. Repeat Step #1 using the Latch Side Brackets. Note that the second Bracket set should be installed directly opposite the first Bracket set.

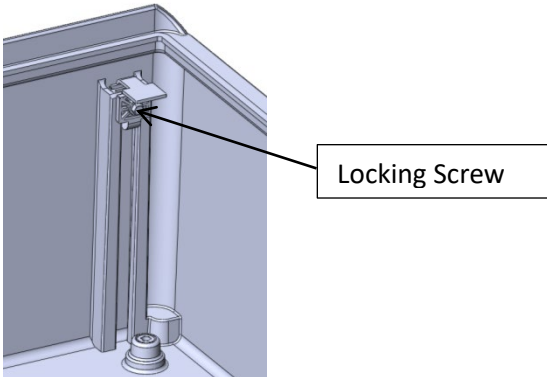

  Step 3. Assemble the Swing Out Panel assembly onto the Hinge Side Brackets. Pull the spring loaded hinge device and align the hinge rod with the hole on the Hinge Side Bracket. Release the spring loaded hinge device to engage the hinge rod in the bracket. Repeat for the opposite side of the Swing Out panel.

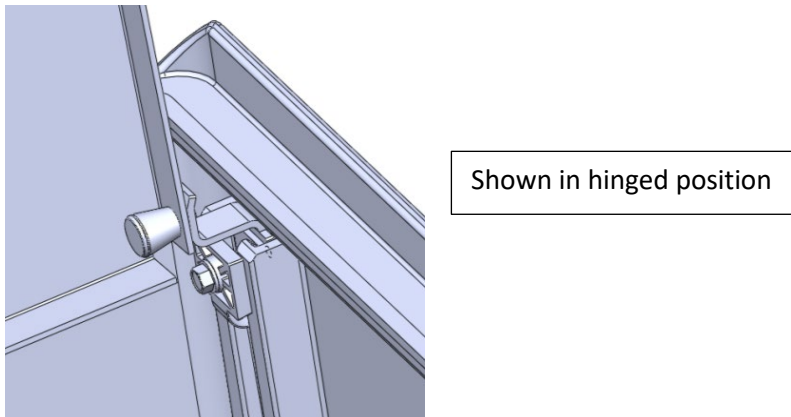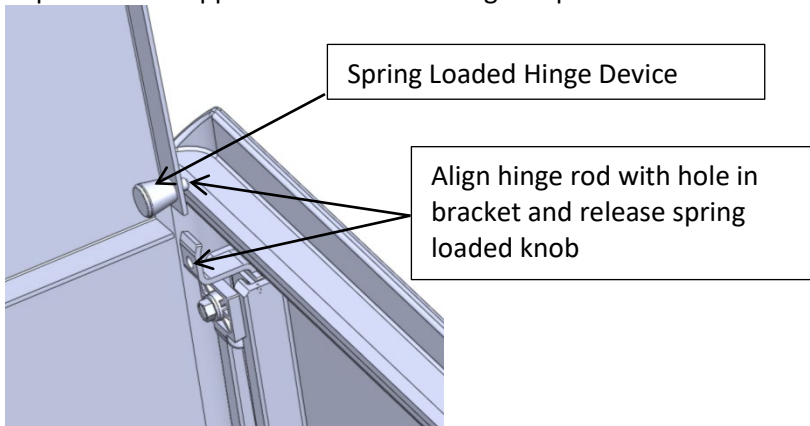

 Step 4. Close Swing Out Panel and verify Latch Side Bracket positions. Some slight adjustment may be needed to get final position of the Swing Out Panel exactly where desired.

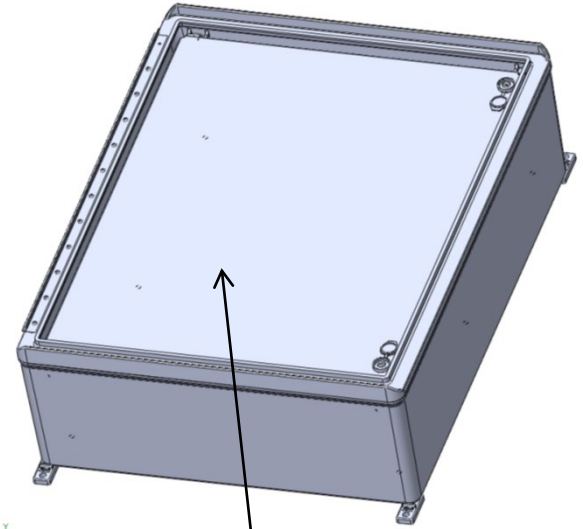

Adjust Latch Side Brackets for final trimming adjustments on Swing Out Panel position.

Step 5. Engage latches on Swing Out Panel to complete assembly of the Swing Out Panel.