




Installation Instructions for POLYLINE® Series Enclosures AMP1648, AMP1860

Instructions for Removing Hinge Clips for Cover Removal

NOTE: Flat Blade Screw Driver or similar tool is required to remove hinge clips

- Unlatch and open the Cover between 90° and 120°. (If the Cover is fully open, the hinge clips cannot be removed.)
- Use the flat blade screwdriver and position the blade to disengage the clip as shown. The hinge clip will unseat when the screwdriver is rotated.
 NOTE: The spring action of the hinge clip may cause the clip to unseat quickly. Place a hand or other means under the hinge clip to catch it during removal.
- 3. Collect the hinge clip that is removed and set aside for reinstallation.
- 4. Repeat steps 2 & 3 for each hinge clip.

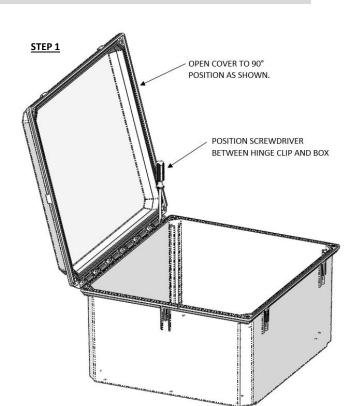

ROTATE SCREWDRIVER BETWEEN BOX AND HINGE CLIP TO UNSEAT THE CLIP FEATURE ON THE HINGE CLIP

CLIP FEATURE



STEP 2

HINGE CLIP SHOWN IN

DARKER GRAY COLOR

Scan Code to Watch Video!

POLYLINE® Nonmetallic Hinge Installation



Installation Instructions for POLYLINE[®] Series Enclosures AMP1648, AMP1860

